
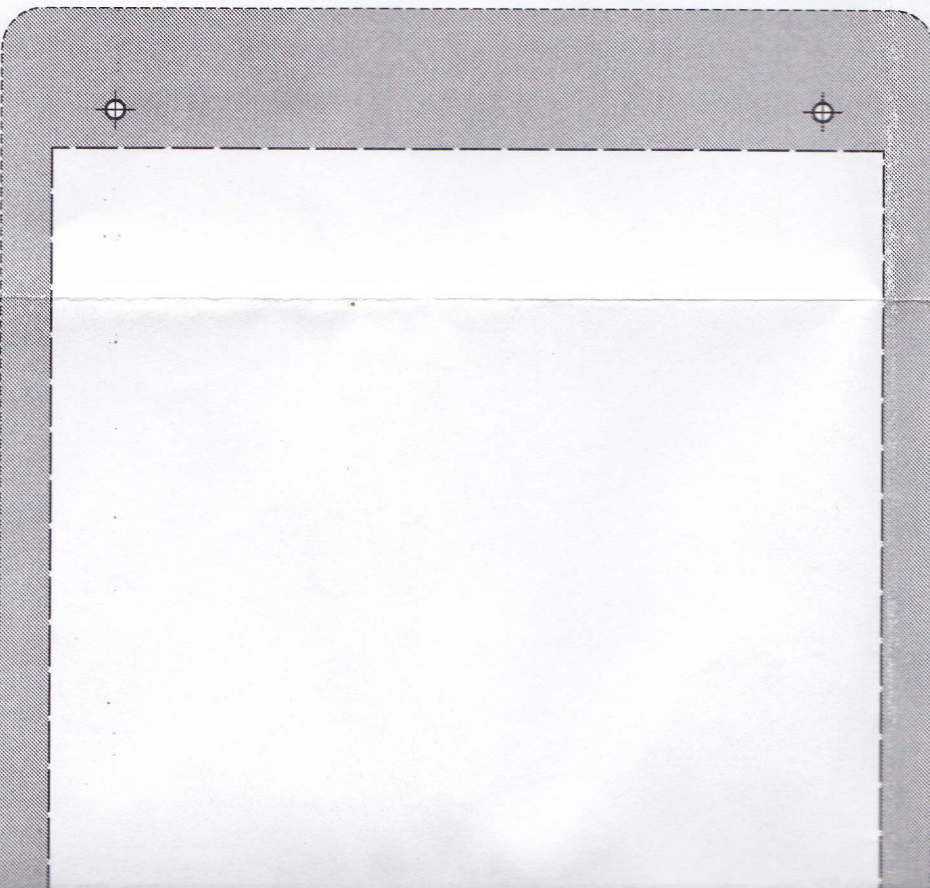
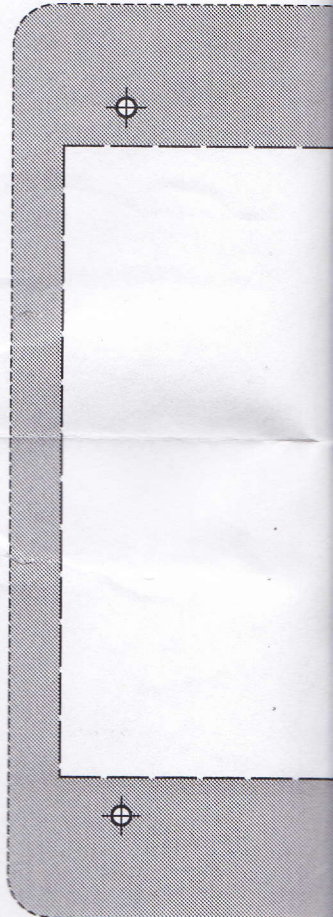


BLUE SEA SYSTEMS

425 Sequoia Drive
Phone (360) 738-8230

Bellingham, WA 98226
Fax (360) 734-4195

990343510 Rev.001


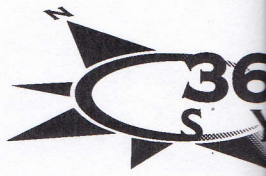








THIS TEMPLATE HAS BEEN PROVIDED TO HELP YOU INSTALL YOUR NEW BLUE SEA SYSTEMS 360 DISTRIBUTION PANEL.

CUTOUT TEMPLATES INCLUDED FOR 1X1, 1X2, 2X1, AND 2X2 PANELS.

DATE	SCALE	DOCUMENT NO.	REVISION NO.	SHEET
11-07-07	1:1	990343510	001	1 OF 1

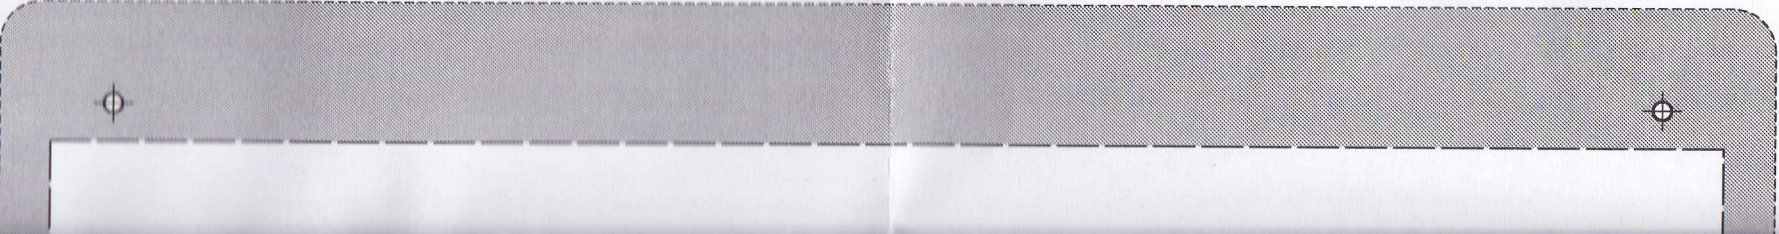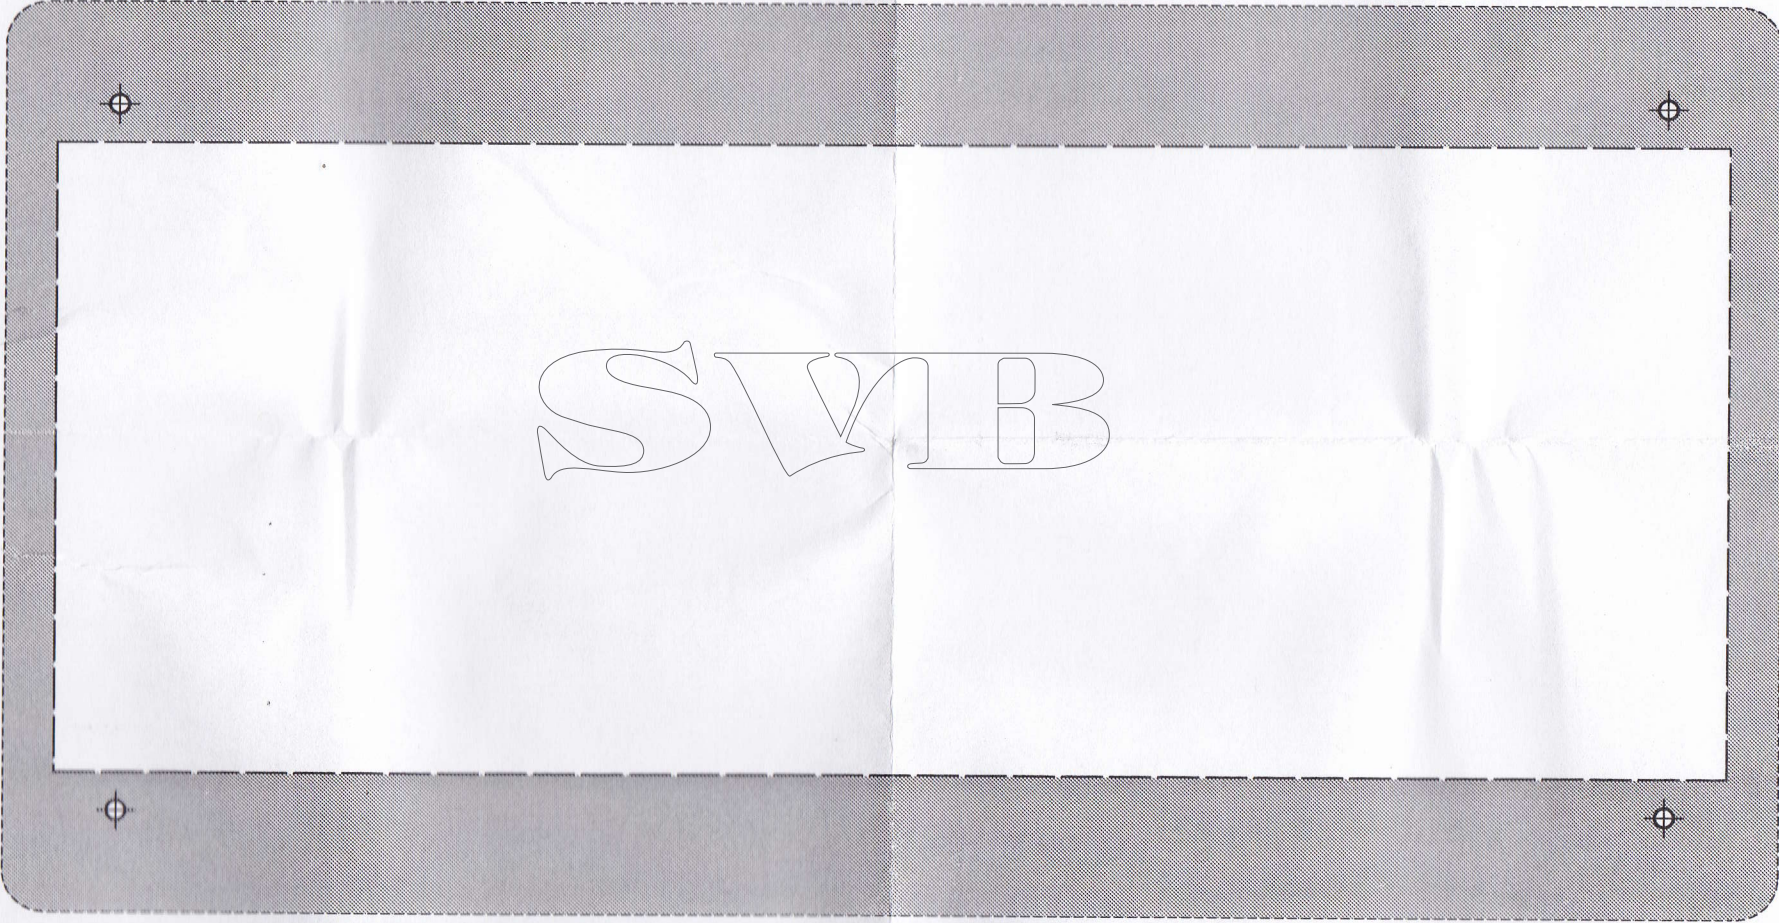

SVIB

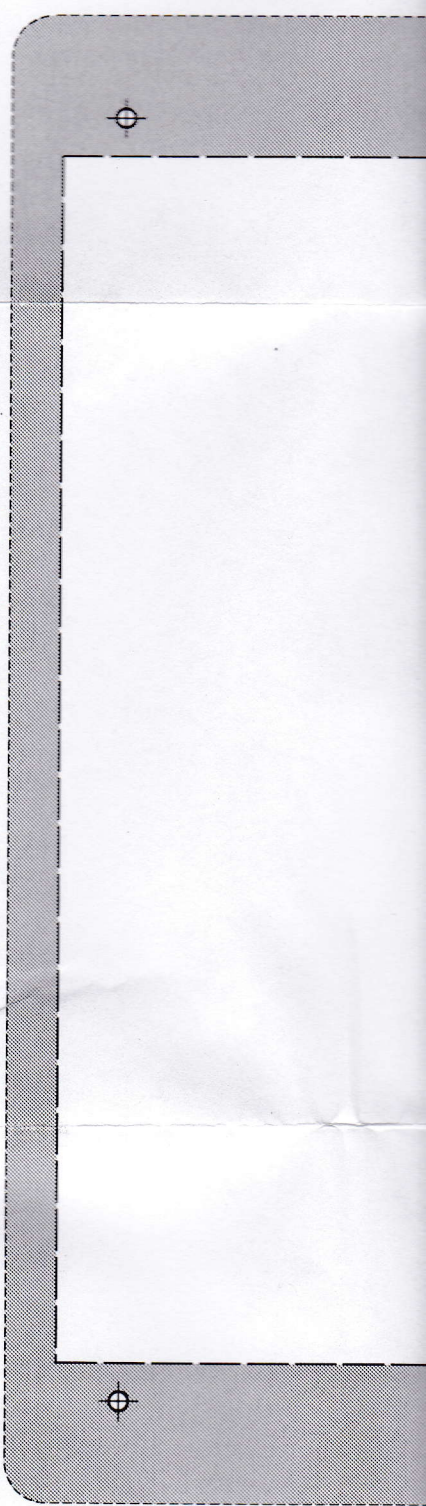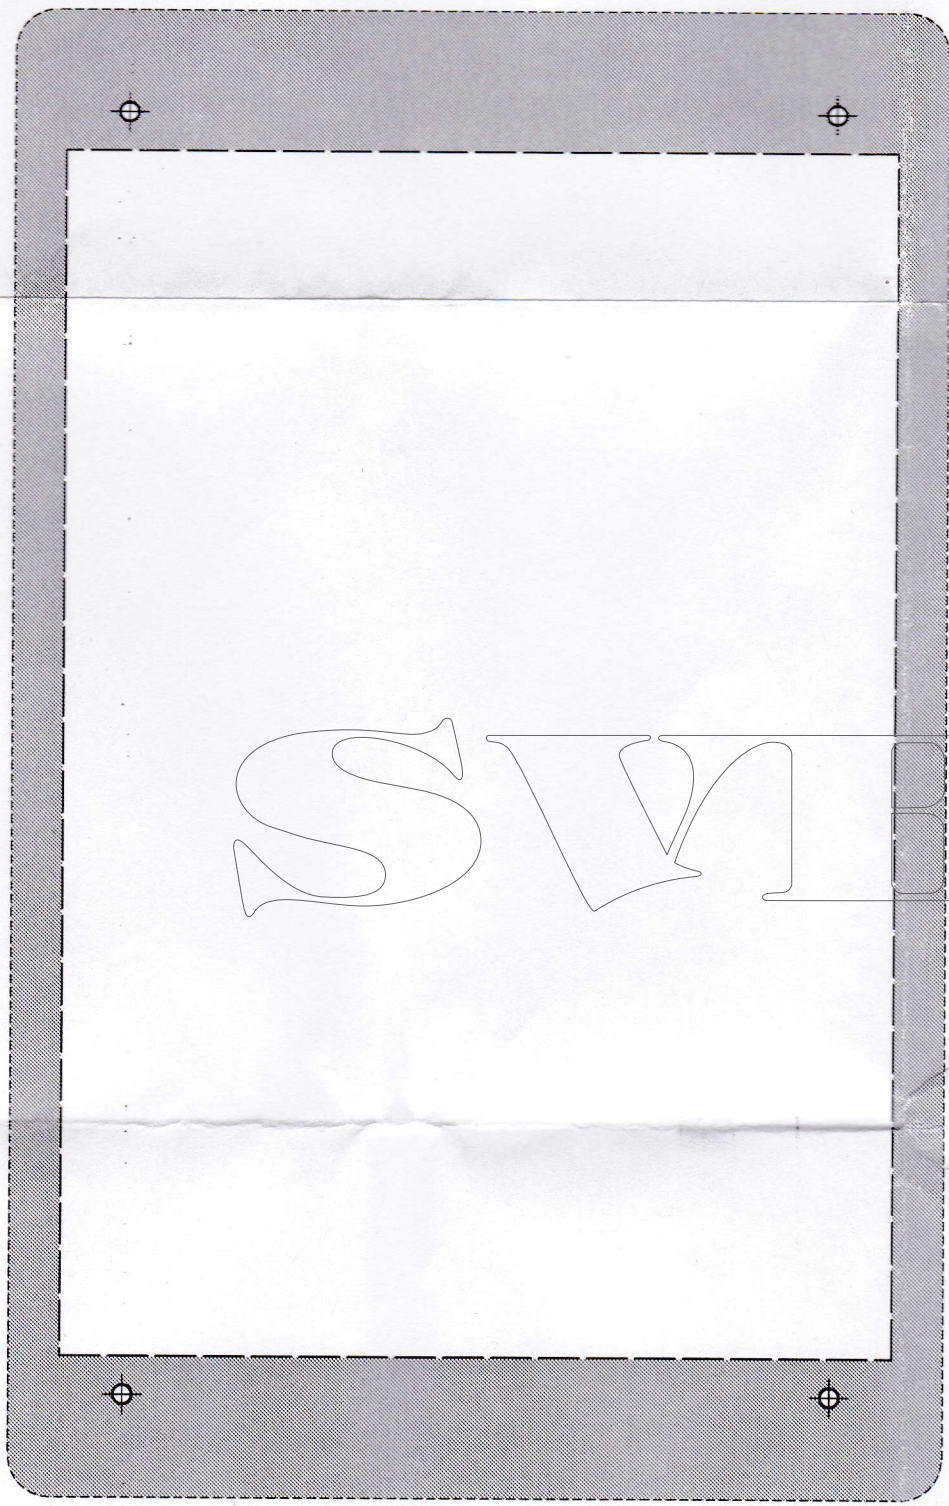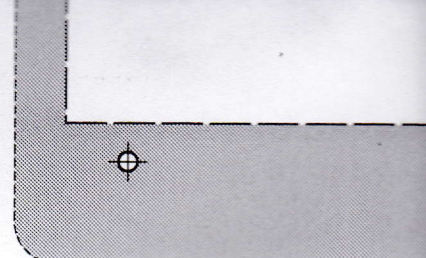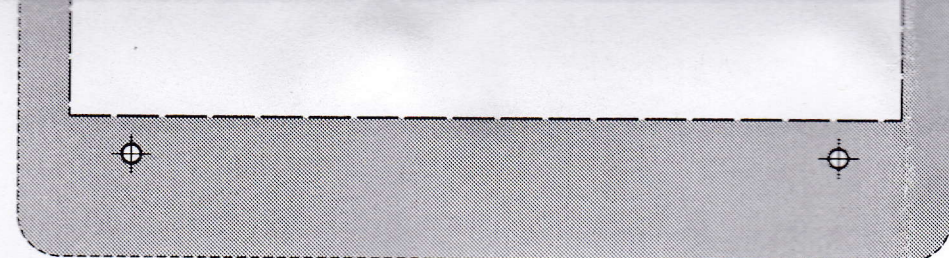

Instructions

1. Identify your panel frame cutout lines on this paper using the Dimension Table provided.
2. Cut along the outside edge of your panel frame template. -----
3. Fix template to surface, securely and squarely leveled.
4. Drill pilot holes for #8 (M4) panel mounting screws. ⊕
5. Scribe along the inside edge of panel frame template. - - - - -
6. Remove template and cut bulkhead along scribe line.

Instructions

1. Identify your panel frame cutout lines on this paper using the Dimension Table provided.
2. Cut along the outside edge of your panel frame template. -----
3. Fix template to surface, securely and squarely leveled.
4. Drill pilot holes for #8 (M4) panel mounting screws. ⊕
5. Scribe along the inside edge of panel frame template. — — — — —
6. Remove template and cut bulkhead along scribe line.

Dimension Table DIMENSIONS ARE SHOWN IN INCHES AND (MILLIMETERS)

Rows x Columns	Panel Height in" (mm)	Panel Width in" (mm)	Cutout Height in" (mm)	Cutout Width in" (mm)
1x1	4 ¾ (121)	4 ⅞ (124)	3 ⅝ (84)	4 ⅜ (110)
1x2	4 ¾ (121)	9 ¼ (235)	3 ⅝ (84)	8 ¾ (221)
2x1	7 ¾ (197)	4 ⅞ (124)	6 ⅝ (160)	4 ⅜ (110)
2x2	7 ¾ (197)	9 ¼ (235)	6 ⅝ (160)	8 ¾ (221)