


# PORTABLE WASHING MACHINE USER MANUAL

## Portable Washing Machine

INDEX		
S.No.	Particulars	Page No.
1	MAIN PARTS	2
2	CIRCUIT DIAGRAM	3
3	OPERATING INSTRUCTIONS	3
4	WASHING	3
5	WASHING GUIDE RECOMMENDATIONS	4
6	WASHING POWDER (DETERGENT)	4
7	WOOLEN FABRIC AND BLANKET	4
8	IMPORTANT SAFEGUARDS	4
9	MAINTENANCE	5
10	REMARK	5

## MAIN PARTS

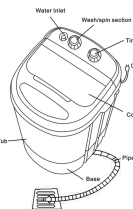


### Attention:

- Don't set it in a bathroom or a place where rains come in easily and it becomes wet.
- Make sure that the item is well connected to the ground.
- Using single socket only and it is forbidden to use multiplied socket together with other electrical appliances.
- Choose the correct power, otherwise it may cause fire or electricity strike.
- Keep the item away from fire sparks to avoid the plastic-deform.
- All the components inside the machine must not touch water during the maintenance period.
- Don't put heavy or hot things on the machine to avoid the plastic-deforming.
- Clean the plug if it is dusted or stuck with dirty things in order to avoid causing fire.
- It is forbidden to use hot water above 55°C in the tub. Otherwise, the plastic parts deform.
- Don't touch the clothes in the washing machine with your hands before the machine completely stops. Danger of injury!
- Don't use the plug when it is in disrepair, otherwise it may cause fire or electricity strike. In case of damage of cable or plug have an authorized technician repair it. Never modify plug or cable in any way.
- You must not put clothes into the machine which are just cleaned with organic vaporizing solvents, such as gas, alcohol. When pulling the plug out, you must not pull the wire in order to avoid the possibility of electric strike or causing fire.
- You should pull out the plug when you are away from home for a long time or after using the item. Also, don't pull out the plug by wet hand to avoid the electric strike.

Read the manual instructions carefully before using the item!

WARNING: To reduce the risk of fire or electric shock, only authorized personnel should do repairs.

## CIRCUIT DIAGRAM

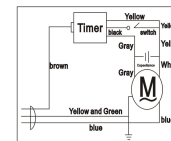

## OPERATING INSTRUCTIONS

### Washing Preparation:

1. The socket must be grounded.
2. Lay down the discharging tube to assure good discharging.
3. Insert the plug into the socket.
4. Connect the water introducing tube into the water inlet point on machine to fill the water into the washing tub.

## WASHING

1. Filling water: fill the water till given level as per number of cloths and requirement.
2. Put in washing powder and select washing time as per type of cloth.
3. Put in the clothes to be washed, when you put the clothes into the tub, the water level will decrease. Add more water if necessary.
4. Selecting water flow: select corresponding water flow. After the washing ends, discharge of the water.
5. Check the pockets of cloths and take out all the coins and other things out of pockets.



### Attention:

1. If there is too much water in the tub, it will spill out of the tub. Do not overflow with water.
2. In order to prevent damage or deforming of washing, it is recommended to tie up some clothes, such as shirts or towels, etc.
3. Pull up all zippers.
4. Pre-treating method just as the figure shows.
5. All pockets of clothes should be empty. Prevent to have coins, nail etc in the clothes and make sure

to take them out as they may damage the machine.

## WASHING GUIDE RECOMMENDATIONS

### The Standard of the Washing Time:

Washing Capacity	Water Type	Water Level	Washings	Washing Time
3.0kg	Standard	As per type of cloth and user requirement	Chemical Fiber	4-6mins
			Kapok, Hemp	5-8mins
			Very dirty washings	6-10mins
			Hot sheets	8-10mins
3.0kg	Soft	As per type of cloth and user requirement	Chemical Fiber	4-6mins
			Kapok, Hemp	6-9mins
			Very dirty washings	10-13mins
			Hot sheets	11-15mins

## WASHING POWDER (DETERGENT)

1. Directly dissolve the washing powder.
2. Put in washing powder when the water level is low.
3. Turn the switch to the position of standard.
4. Start the machine and stir the water for 1 min.
5. After the washing powder dissolves, put in the washing and fill up water to the expected level.
6. Select correct washing capacity.

## WOOLEN FABRIC AND BLANKET

Washing pure woolen blanket and electric blanket is absolutely forbidden. We do not recommend washing pure woolen fabrics in the machine.

## IMPORTANT SAFEGUARDS


1. Close supervision is necessary when any appliance is used by or near children.
2. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning appliance.
3. Do not operate any appliance with a damaged has malfunctioned or has been damaged in any manner.
4. In order to avoid the risk of an electric shock, never try to repair the item yourself. Take it to an authorized service station for examination and repair. An incorrect reassembly could present a risk of electric shock when the item is used.
5. Do not use outdoors or for commercial purposes.
6. Do not let power cord hang over the edge of a table or counter, or touch hot surfaces.
7. Do not place on or near a hot gas or electric burner or heated oven.
8. Unplug the unit when finished using.
9. Do not use appliance for other than intended use.
10. Do not intend to operate by means of an external timer or separate remote-control system.
11. To disconnect, turn control to OFF setting, then remove plug form wall outlet.
12. This appliance is not intended for use by individuals (including children) with restricted physical, physiological or intellectual abilities or deficiencies in experience and/or knowledge unless they are supervised by a person responsible for their safety or receive from this person instruction in how the appliance is to be used. Children should be supervised to ensure that

they do not play with the appliance.

## MAINTENANCE

1. Please pull the plug out of the socket (don't touch the socket when your hands are wet) and put it at the correct position.
2. After discharging the water in the tub, please turn the switch from discharge to standard.
3. Pick up the water introducing tube and hang the discharging tube.
4. Clean the housing of the machine, wipe it thoroughly, and wipe out the dirt with chemicals, such as alcohol, eradicant, acetone, gas, etc. When it is very dirty, please use neutral liquid soap to clean.
5. Close the lid, place the machine at ventilation in the room.

## REMARK

1. Water is not allowed to enter the inner part of the machine directly. Otherwise, the electric motor will be conducted by electricity. This is the reason that electric stroke may happen.
2. Due to ongoing product improvements, specifications and accessories may change without notice. Actual product may differ slightly to that depicted.
3.  **ENVIRONMENT** Correct Disposal of this product This marking indicates that this product should not be disposed with other household wastes throughout the country. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.