



WIRELESS PANEL


A. Before programming:

*User should check batteries status is full or poor. Handheld remote use 23A battery ; Wireless joystick use DC power from user own DC power.

*Only transmitter replaced or repaired need to be programmed. Factory default is programmed.

*Make sure there is no any RF wireless devices operating nearby to avoid interface.

B. Programming:

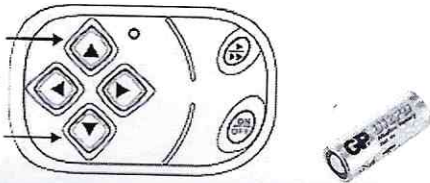

Step1 : Disconnect or switch off searchlight DC power

Step2 : Reconnect or switch on searchlight DC power.

Within 5 seconds, Press up and down button (handheld remote) or programming button (wireless joystick)

*Note: Unlike Searchlight its self, wireless joystick has to keep power on during programming.

-----Searchlight will bright 1~4 times when transmitter acknowledged-----

- Step3 : Leave searchlight alone to close programming or program 2nd transmitter within next 5 seconds.

*One searchlight accepts 4 transmitters at most. 5th will replace the 1st one position.

