

REMORAN WAVE 3

USER MANUAL ADDENDUM December 2024 version 4


IMPORTANT PRECAUTIONS

Your new Wave 3 hydrogenerator can be considered a *safety equipment*.

By taking care of it properly, it will serve you well and reliably.

INSTALLATION

- Cables are not meant to be shortened or lengthened by the user. If you need different lengths of cable, contact the manufacturer! Incorrect reassembly of the connector may cause serious damage to the product.
- The black L-shaped connector must not be rotated, so make sure the deck connector is installed in the correct orientation so the L-shaped connector will point the correct way when in use.

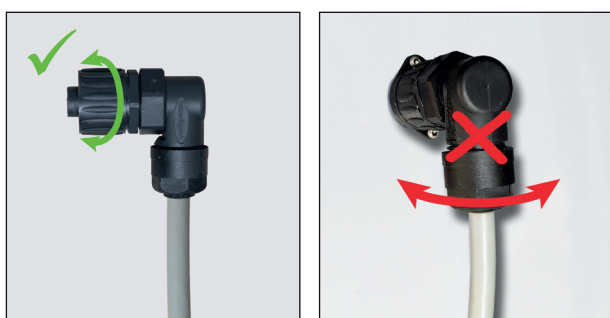

Always follow the information given in the INSTALLATION INSTRUCTIONS manual closely. If the installation has not been done according to the manual, the warranty may not be valid anymore.

EVERYDAY MAINTENANCE

After every use:


- Rinse the hydrogenerator outboard unit with fresh water. It would be useful to wax the product before the first use to facilitate the cleaning of the salt water
- Dry the outboard unit. Turn it upside down to get the water out, repeat as necessary.
- Lubricate mechanical parts as necessary, especially if they are getting stuck.

USING THE HYDROGENERATOR


- NOTE 1:
Lift the outboard unit from the water whenever it is not in use.
- NOTE 2:
The locking pin MUST always be in place when the unit is in use.
- NOTE 3:
The Black L-shaped connector must not be turned or rotated while plugged in.



Don't step onto knob or handle

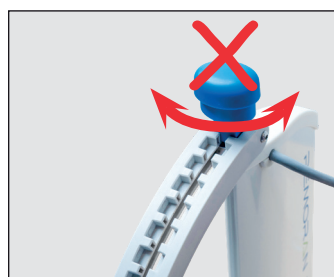

Don't rotate the knob

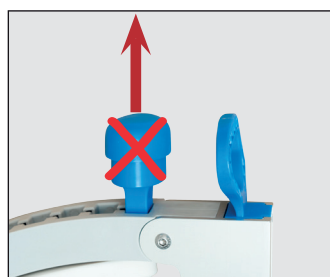

Don't carry by the knob.



Carry by the handle and the top of an angle guide

Read the installation manual and the full user manual carefully. Manuals can be downloaded at <https://remoran.eu/> (Support menu -> Downloads)