
Assembly instructions

1. Put the locking washer on the thread of the flat line spool.



2. Insert the provided screw into the handle knob.

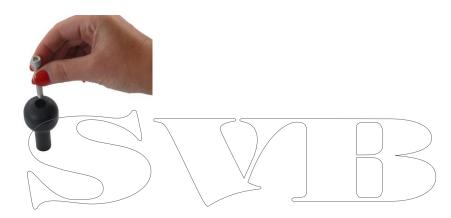


3. Install the handle knob on the locking washer.



4. Hold the guide arm on the flat line spool to mount the axle.



5. Put the axle through the flat line spool. In this connection pay attention to the locking holes to set the correct angle of the guide arm.

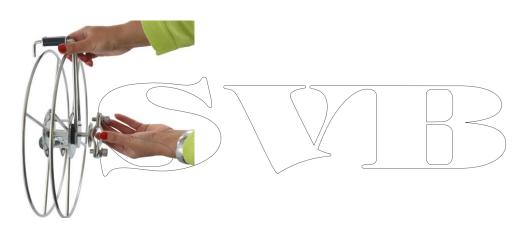

6. Put the distance washer under the self-locking nut and tighten.

